



Scan for more information

ST-01

User Manual

Table of Contents

Specifications	3
Parts List	4
Assembly & Installation	5
Adjustability	8



Have any queries? Our expert engineers are here to help!



sales@progressivedesk.com



1-800-828-9414




progressivedesk.com

Specifications

Headrest Removable	Yes
Headrest Height Range	2.4"
Headrest Tilt Adjust	Included
Backrest Locking	3 Positions
Backrest Tension Control	Included
Recline Angle	90° - 130°
Lumbar Height	Adjustable
Seat Height Range	17.3" - 21.3"
Seat Width	19.5"
Seat Depth	20.5"
Armrest Height Range	23.8" - 27.8"
Product Weight	28.7 lbs.
Max Weight Capacity	330 lbs.
Chair Dimensions	25.2" × 17.7" × 43.3" - 47.2"
Caster Material	Nylon
Base Material	Plastic
Certifications	BIFMA
Additional Features	Coat Hanger Hook




Parts List

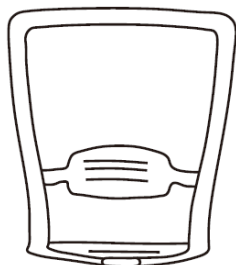


A (x1)
Back




B (x1)
Seat

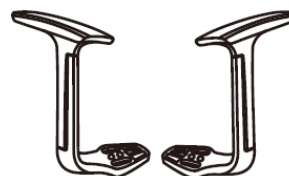

C (x1)
Armrests

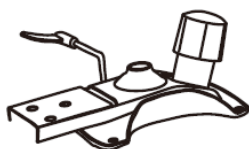

D (x1)
Tilt Mechanism

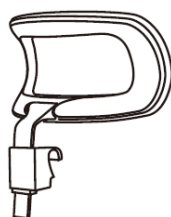


E (x1)
Headrest



F (x1)
Coat Hanger



 G (x1)
Gas Lift Cylinder



H (x1)
Base



I (x5)
Casters



J (x6)
M6x35
Screws



K (x3)
M8x18
Screws



L (x4)
M6x30
Screws



M (x2)
Preinstalled
Screws




N (x1)
5mm Hex
Key




O (x1)
Hex Key
Screwdriver

Assembly & Installation


Step 1: Assemble the Base

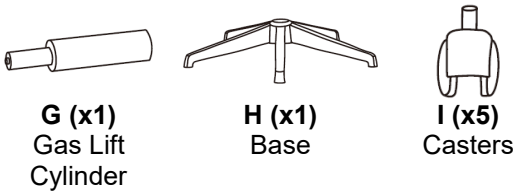


Step 1A: Remove the packaging cap from the Cylinder (G).

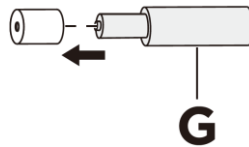


Step 1B: Firmly insert the 5x Casters (I) into the bottom of the Base (H), then insert the Gas Lift Cylinder (G) into the top of the Base (H) with the rod side up.

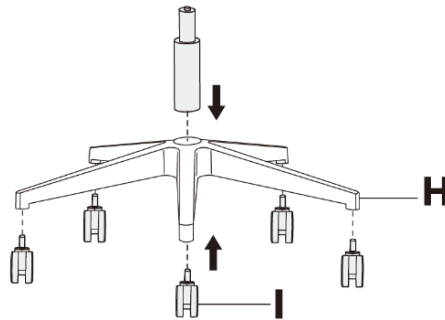


Step 2: Attach the Armrests to the Seat

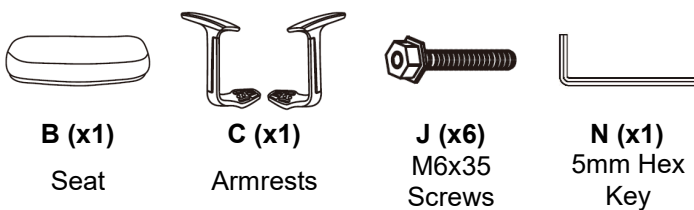


Align the Armrests (C) to the Seat (B) at the desired width. Screw in the Armrests using 6x M6x35 Screws (J). Tighten with the Hex Key (N).

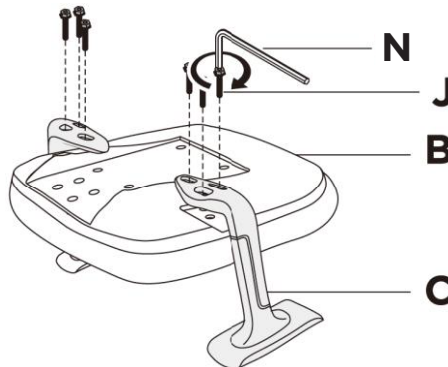

Step 3: Attach the Tilt Mechanism to the Back

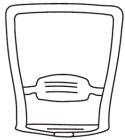

A (x1)
Back

 

D (x1)
Tilt
Mechanism




K (x3)
M8x18
Screws



N (x1)
5mm Hex
Key

Attach the Tilt Mechanism (D) to the Back (A) using 3x M8x18 Screws (K). Tighten with the 5mm Hex Key (N).

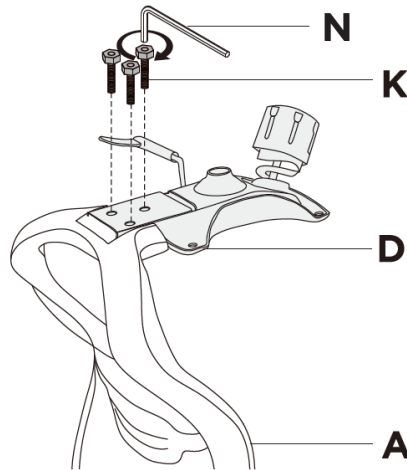

Step 4: Attach the Tilt Mechanism to the Seat




L (x4)
M6x30
Screws




N (x1)
5mm Hex
Key

Attach the Tilt Mechanism (D) to the Seat (B) using 4x M6x30 Screws (L). Tighten with the 5mm Hex Key (N).

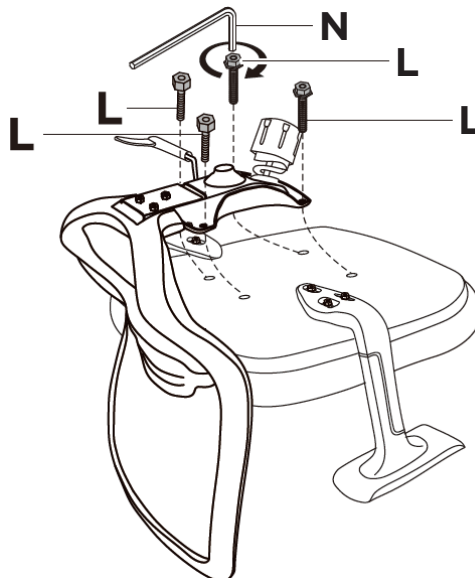

Step 5: Attach the Tilt Mechanism to the Gas Lift Cylinder

Line up the hole on the Tilt Mechanism to the Gas Lift Cylinder and attach the two parts together. Ensure that it is properly attached by applying weight on the Seat.

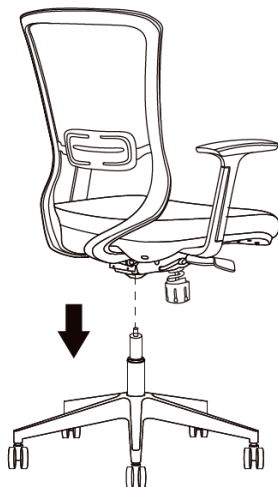

Step 6: Attach the Headrest and Coat Hanger



E (x1)
Headrest



F (x1)
Coat Hanger




M (x2)
Preinstalled
Screws



O (x1)
Hex Key
Screwdriver

Step 6A: Unscrew the Preinstalled Screws (M) from the Headrest (E).

Step 6B: Attach the Headrest (E) and Coat Hanger (F) to the top of the Backrest using the 2x Preinstalled Screws (M). Tighten with the Hex Key Screwdriver (O).

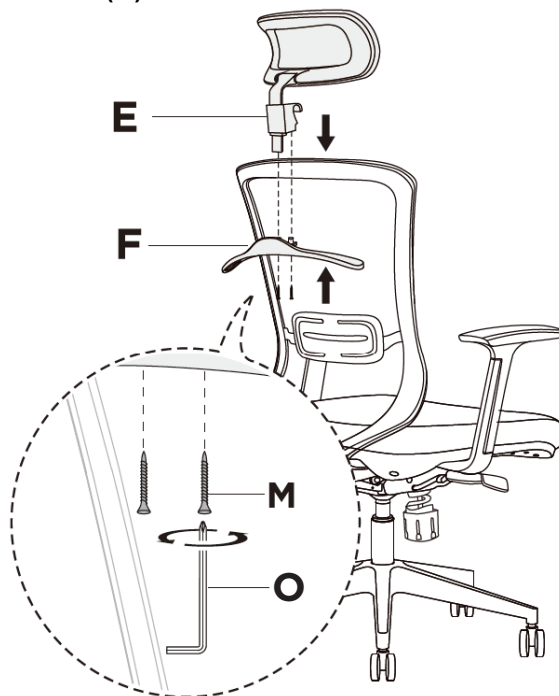


Adjustability

Seat Height




Raise the seat height by pulling up on the lever with no weight applied on the seat. Lower the seat height by sitting in the chair and pulling up on the lever.

Headrest

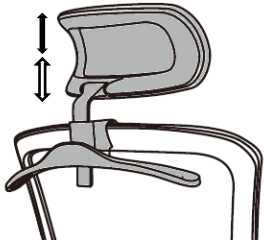


Adjust the headrest height and tilt angle to the desired position by applying pressure up or down.

Lumbar

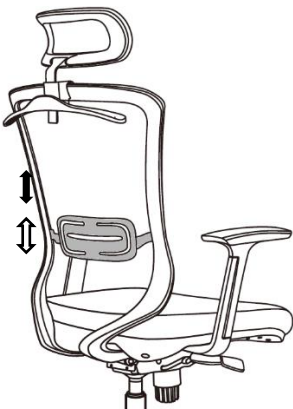


Position the lumbar support for optimal support by adjusting it up or down.

Back Tilt Locking

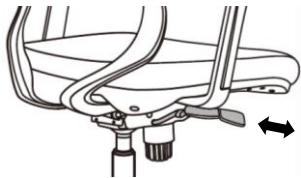

Lock the back at 3 different positions by leaning to the desired location and pushing the lever in. Unlock the backrest by pulling out the lever.

Backrest Tension

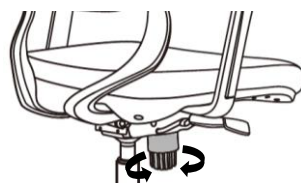

Adjust the tension in the backrest by spinning the knob underneath the seat. Turn right to increase tension and turn left to decrease tension.



Have any queries? Our expert engineers are here to help!



sales@progressivedesk.com



1-800-828-9414



progressivedesk.com