



Scan for more information

RT-24

User Manual

SPECIFICATIONS

Wireless Frequency	2.4GHz
Wireless Range	Up to 100 ft, line-of-sight
Compatible Control Boxes	FLTCON Series
Remote Colors	Black or White
Kit Includes	1x Wireless Remote 1x RF Receiver Module 1x Under-Desk Mounting Bracket 2x Mounting Magnets with 3M Adhesive (for wall or surface use) 7x Mounting Screws
Functions	Up Down Go to Memory Position 1 Go to Memory Position 2 Save/Program Memory Positions
Battery Type	1x CR2032 Lithium Coin Cell, 3V (included)
Remote Dimensions (LxWxH)	3.3" x 1.2" x 0.5"
Unit Weight	0.22 lbs

Have any queries? Our expert engineers are here to help!



sales@progressiveautomations.com



1-800-676-6123

 


progressiveautomations.com


DIMENSIONS

Note: All dimensions are listed in inches.

REMOTE DIAGRAM

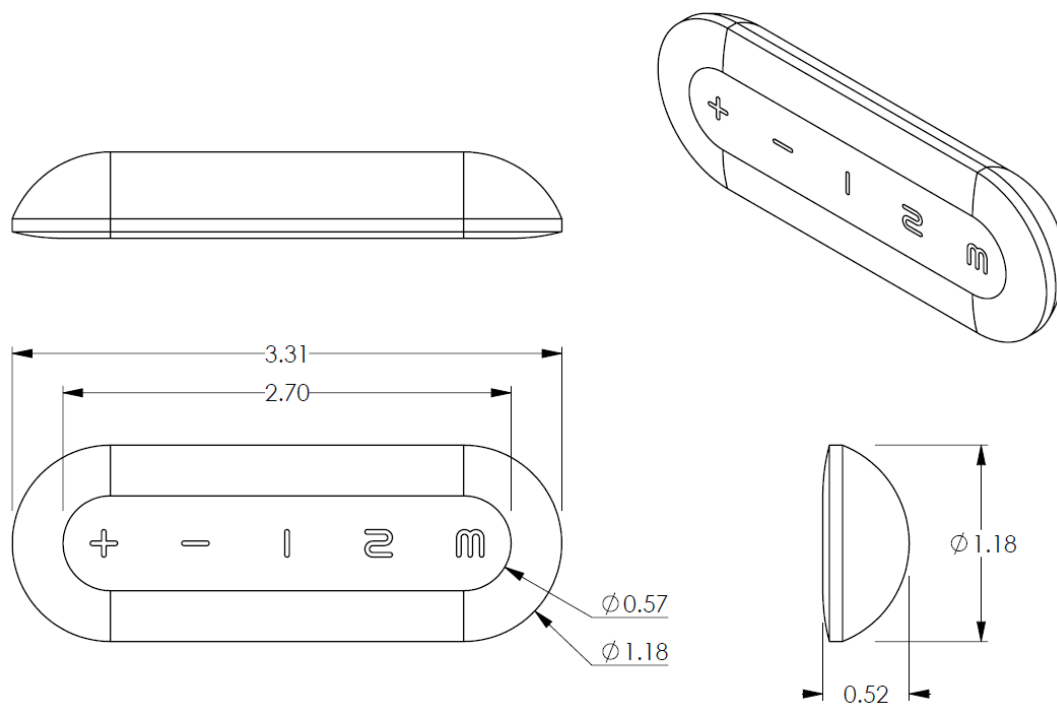


BRACKET DIAGRAM

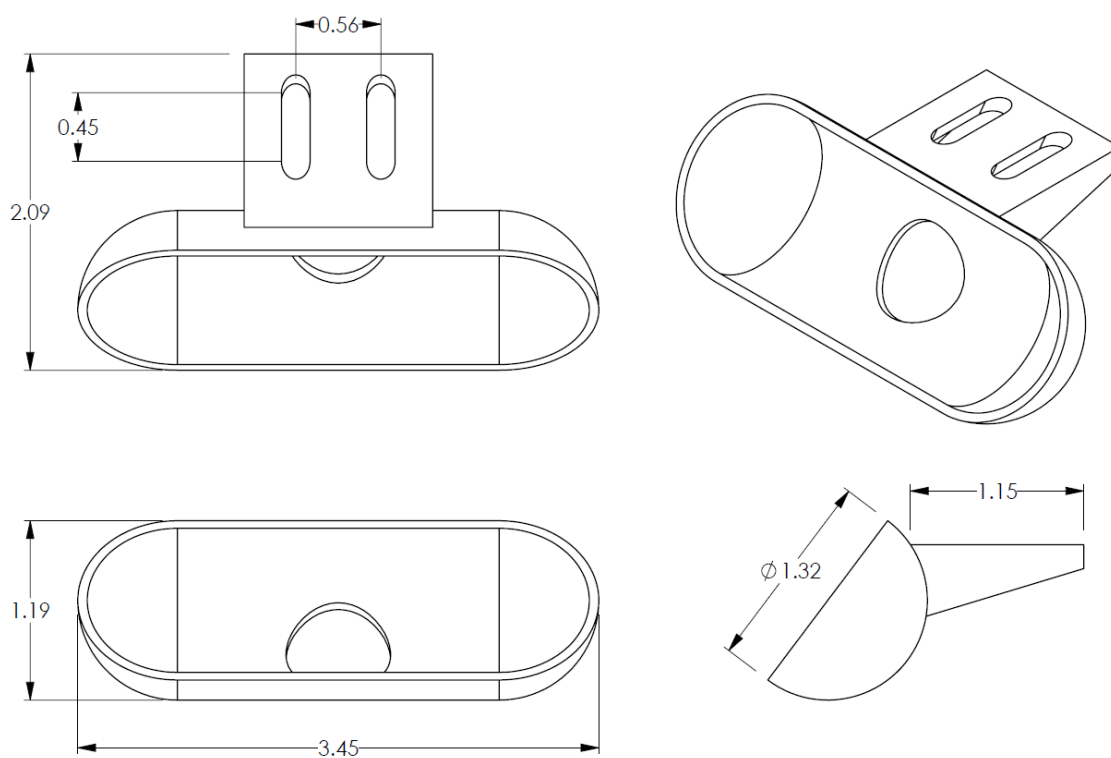 

OPERATING NOTES

INITIAL SETUP

 1. Plug in the receiver to the FLT control box.
2. To pair the remote, press and hold the pinhole button on the receiver, then press both the up button (+) and down button (-) on the remote. The red light on the remote will turn on and an audible beep will come from the control box, confirming that the devices are paired.

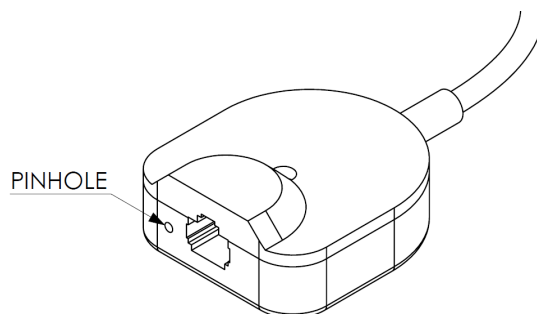

SETTING MEMORY POSITIONS

1. Move the actuator(s) to the desired position using the up button (+) and down button (-).
 2. Press the memory button (M), then the button you want to save the position to (1 or 2)
 3. Press the saved memory button to move the actuator(s) to the saved height.
- Note:** Pressing any button during movement will stop the actuator(s).

REMOTE BUTTONS

Remote Button	Control
+	Press and hold to extend actuator(s).
-	Press and hold to retract actuator(s).
1	Memory Position 1 – Press once to move to saved position 1.
2	Memory Position 2 – Press once to move to saved position 2.
M	Memory Button – Used for setting memory positions.

RESET PROCEDURE

See the FLT control box user manual for instructions.